




REFRIGERATION ENGINEERING

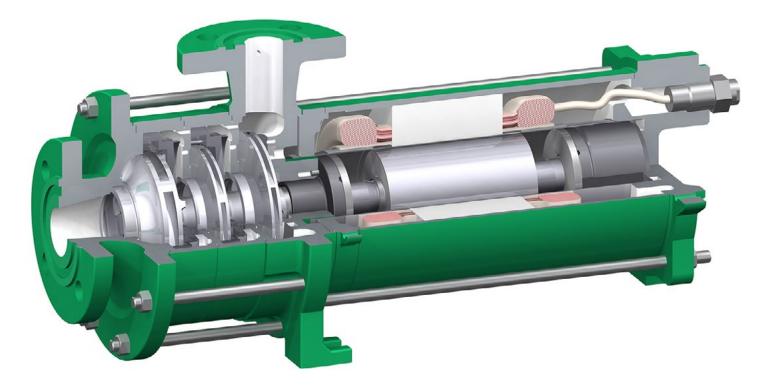

ZART[®] simply best balance

Table of Contents

General information	3
Function	4
Operating principle	5
Bearings	5
Characteristic maps	6
2900 rpm 50 Hz	6
3600 rpm 60 Hz	7
Versions	8
Versions CAMhk	8
Materials / pressure stages / flanges	9
Noise expectancy values	9
List of parts Dimension drawing for motors of size:	10
AGX 3.0 / AGX 4.5	11
Versions CAMhk	12
Documentation and tests	13

Installation	14
Flow regulation	15
Flow regulator	15
Design software	18
Design software / services	18
Benefits of the design software	19
Contact	20



Table of Contents
General information
Function
Operating principle
Characteristic maps
Versions
List of parts
Collective measurements
Documentation and tests
Installation
Flow regulation
Design software
Contact

Hermetic

 \searrow

Information

Applications

- Food industry: Cooling and deep-freezing with natural refrigerants
- Sports and leisure facilities, such as bobsled tracks, ice rinks or ice hockey stadiums
- Cooling modules in the chemical industry
- = Freeze-drying and oil-cooling systems for transformers
- CO₂ cooling for mainframes and server centres

Canned motor pump type CAMhk

The CAMhk type is the specially adapted solution for CO_2 applications. As a high-pressure version, the CAMhk is optimally adapted to existing installation conditions and is suitable for 52 bar standstill pressure.

Type / design

Horizontal, seal-less section-type pumps with completely closed canned motor, with radial impellers, multi-stage, single-flow.

Drive

The rotor lining, one of our core competences, is manufactured using the compact extrusion method and as a nickel-base alloy, it is an essential component of the highly efficient canned motor. The canned motor filled with liquid accelerates to the operating speed in seconds. It is wear-free and maintenance-free during continuous operation due to the hydrodynamic sleeve bearings. The canned motor is low-noise and low-vibration and offers double security against leakage.

Operating data

Temperature	
Application conditions	-50°C bis +/-0°C
Standstill	–50 °C bis +15 °C
Canned motors	
Output	up to 4.5 kW
Speed	2800 rpm or 3500 rpm (frequency control possible – with frequency converter from 1500 rpm to 3500 rpm)
Voltage	230, 400, 480, 500, 575, 690 Volt
Frequency	50 or 60 Hz
Type of protection	IP 55

Pump and hydraulics designations

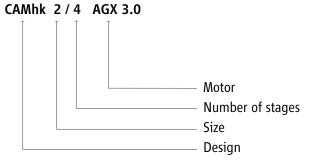


Table of ContentsGeneral informationFunctionOperating principleCharacteristic mapsVersionsList of partsCollective measurementsDocumentation and tests


Installation


Flow regulation

Design software

Function CAMhk

The partial flow for cooling the motor and lubricating the bearing is taken from the pressure side after the last impeller and passed through the motor chamber. The partial flow is not returned to the suction side of the pump through the hollow shaft but to an area with increased pressure between two impellers. Therefore, point 3 in the pressure-temperature diagram that corresponds to the greatest heating has sufficient distance from the vapour pressure curve to prevent gasification within the pump.

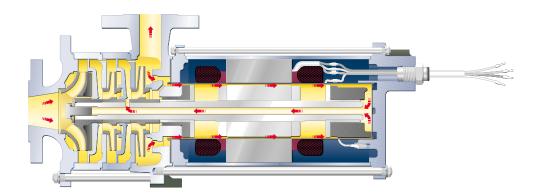

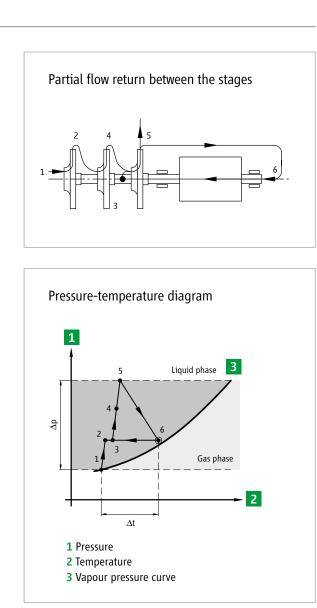


Hermetic

Bearings

The hermetically sealed design requires the arrangement of bearings in the pumped liquid. Therefore, only hydrodynamic plain bearings are used in HERMETIC pumps. With correct operational mode, these bearings have the advantage that there is no contact between the bearing sliding surfaces. As a result, they are wear-free and maintenance-free in continuous operation. A service life of 20 years is common for hermetically sealed pumps.


In refrigeration engineering, carbon graphite is used as the bearing bush material that can withstand particularly high radial and axial loads. In addition, the material has a high resistance to elevated and low temperatures and high fatigue strength.

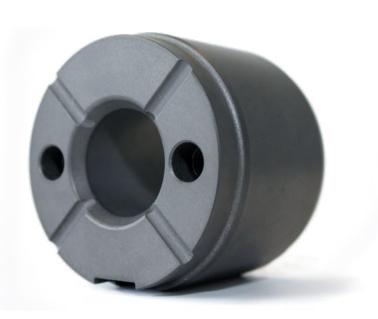



CHARACTERISTIC MAPS

2900 rpm 50 Hz

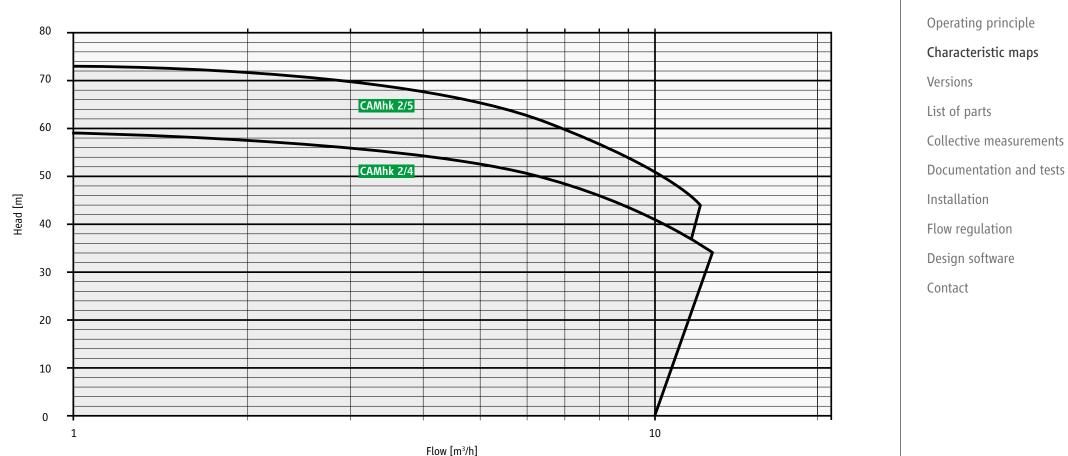

6

Hermetic


Table of Contents

Function

General information

CHARACTERISTIC MAPS

3600 rpm 60 Hz

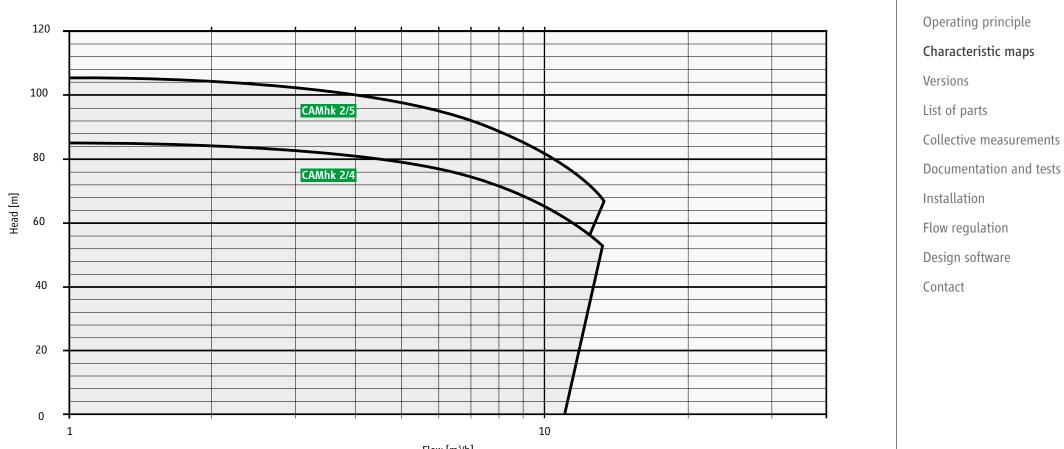

Flow [m³/h]

 \checkmark

Hermetic

Table of Contents

Function

General information

7

VERSIONS

Versions CAMhk

Туре	Motor	Pump data		Motor data 50 Hz / 60 Hz		Weight kg	PN
		Q _{min} m³/h	Q _{max} m³/h	Output kW [P2]	Rated current at 400 V / 480 V		
CAMhk 2/4	AGX 3.0	1.5	14.0	3.0/3.4	7.1	72	52
CAMhk 2/5	AGX 4.5	1.5	14.0	4.5/5.6	10.4	81	52

Hermetic

Table of Contents

General information

Function

Operating principle

Characteristic maps

Versions

List of parts

Collective measurements

Documentation and tests

Installation

Flow regulation

Design software

Contact

 \searrow

8

Materials / pressure stages / flanges

Housing	1.0619+N
Suction cover	S 355J2+N
Stage casing	1.0460
Diffuser	JL 1030
Impellers	JL 1030
Slide bearing	1.4021 / Coal
Shaft	1.4021
Rotor lining	1.4571
Seals	AFM 34*
Pressure rating	PN 52**
Flanges	according to DIN EN 1092-1; PN 64 type D (with groove)

* asbestos-free aramid fibre, ** test pressure 78 bar

Noise expectancy values


Motors	AGX 3.0	AGX 4.5
Output power [P2 at 50 Hz]	3.0 kW	4.5 kW
max. expected sound pressure level dB(A) at 50 Hz	52	54
Output power [P2 at 60 Hz]	3.4 kW	5.6 kW
max. expected sound pressure level dB(A) at 60 Hz	52	55



Table of ContentsGeneral informationFunctionOperating principleCharacteristic mapsVersionsList of partsCollective measurementsDocumentation and testsInstallationFlow regulationDesign software

LIST OF PARTS

List of parts CAMhk

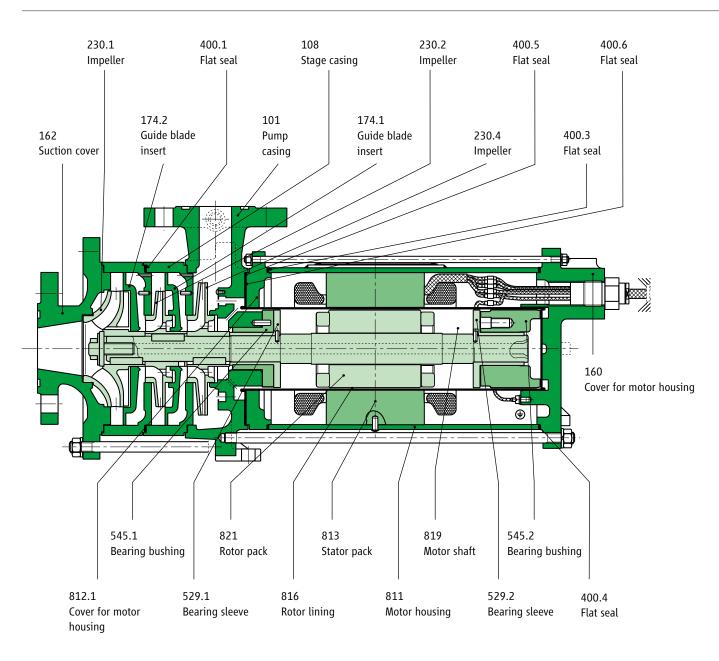


Hermetic

Table of Contents General information Function Operating principle Characteristic maps Versions List of parts Collective measurements Documentation and tests Installation Flow regulation Design software Contact

 \searrow

COLLECTIVE MEASUREMENTS

Dimension drawing for motors of size: AGX 3.0 / AGX 4.5

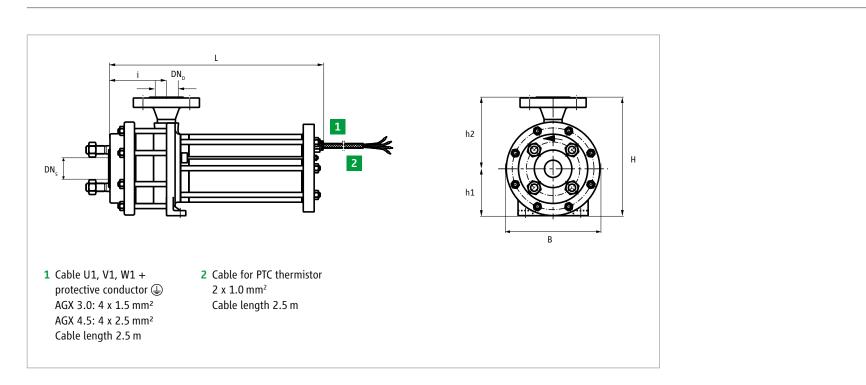

Hermetic

Table of ContentsGeneral informationFunctionOperating principleCharacteristic mapsVersionsList of partsCollective measurementsDocumentation and testsInstallationFlow regulationDesign software

COLLECTIVE MEASUREMENTS

Versions CAMhk

Dimen- sions	CAMhk 2 / 4-stage	CAMhk 2 / 5-stage	
	AGX 3.0	AGX 4.5	
Length / L	590	696	
Width / W	218	218	
Height / H	277	277	
h1	110	110	
h2	167	167	
i	218	259	
DNs	40	40	
DN _D	32	32	

Hermetic

Table of Contents General information Function Operating principle Characteristic maps

Versions

List of parts

Collective measurements

Documentation and tests

Installation

Flow regulation

Design software

Contact

 \checkmark

DOCUMENTATION AND TESTS

Documentation and tests

Documentation according to HERMETIC Standard consisting of:	Warranty		
Operating manual for the HERMETIC pump	30 months from delivery Standard tests Hydrostatic pressure test with 1.5x nominal pressure Balancing of shaft and impeller according to DIN ISO 1940, 6.3 Leak test of the complete pump For the state of the complete pump		
Technical specifications			
Characteristic curve of the pump			
Sectional drawing			
Bills of materials			
Dimensional drawing			
Cable connection diagram	 Functional test (optionally with protocol) 		
Plain bearing play	Additional test		
EU Declaration of Conformity	Factory certificate according to EN 10204 / 3.1 for pressurised parts in contact with medium (chemical analysis)		
	Factory certificate according to EN 10204 / 3.1 for counter flanges		
	Factory certificate according to EN 10204 / 2.2 for impeller and pump shaft		
	EUR.1 movement certificate (after examination)		
	RMRS / DNV / Hapag Lloyd		



Table of Contents General information Function Operating principle Characteristic maps Versions List of parts Collective measurements **Documentation and tests**

Installation

Flow regulation


Design software

Contact

 \checkmark

Automatic venting

- 1. Use a non-return valve between the discharge nozzle and gate valve to ensure that the medium does not flow back after switching off the pump.
- 2. To allow venting, provide a bypass pipe:
 - Ahead of the non-return valve.
 - Please note: do not provide non-return valves in the bypass pipe.
- 3. For parallel operation:
 - Separate supplies for the pumps
 - Separate bypass pipes

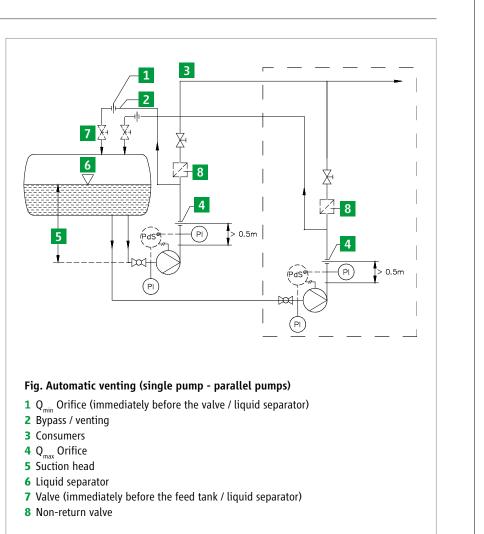

Hermetic

Flow regulator

General information

The flow regulator was specially developed for refrigerant systems. This type of valve allows the safe operation of pumps in a range normally not possible for pumps with Q_{max} orifice. The adjacent graph shows the added operating range obtained by using a flow regulator instead of a Q_{max} orifice. Often, a smaller, less expensive pump can be used.

Operation


The flow regulator must be filled with liquid during operation. The operation of the valve depends on the material data of the pumped medium. When ordering the valve, it is therefore important that complete information on the characteristics of the pumped medium in the operating range to be regulated is available. The density of the pumped medium is the most important characteristic for the correct design of a valve.

Maintenance

The flow regulator requires no regular maintenance or readjustment. The valve inserts can be reordered if necessary.

Area of application

The flow regulator is mounted on the discharge branch of the pump. The flow regulator limits the maximum flow rate of the pump. However, in contrast to the Q_{max} orifice, the flow rate $< Q_{max}$ is almost equal to the full delivery pressure of the pump behind the valve. The flow regulator regulates the delivery rate to ensure that the maximum pump capacity is not exceeded. This protects the pump from overload and keeps the delivery rate within the optimum NPSH range of the pump.

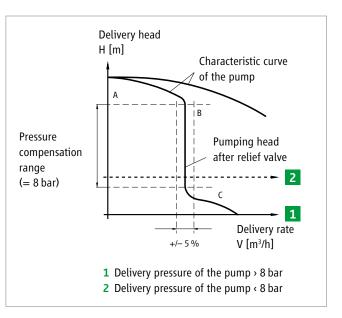

Hermetic

Flow regulator

Working principle

The flow restriction is achieved by specially shaped openings in a springloaded, movable piston. The pressure difference in front of and behind the piston moves it. This ensures that only the appropriate amount flows through the openings. It follows that with increasing pressure difference, the spring is compressed. This means that the specially shaped openings are only partially released. When the pressure difference in front of and behind the valve decreases, the spring pushes the piston back in line with the changing pressure difference releasing a larger part of the opening. If the pressure difference exceeds the specified maximum value (pressure compensation range, generally 8 bar), the spring is compressed up to the stop, and the valve then works like a fixed orifice. The same applies when the required minimum pressure is not reached.

Functional schematic of the valve


Position A In position A, the insert works as an orifice. As a result, little pressure is relieved at the valve.


Position B


In the pressure compensation range, the insert limits the maximum volumetric flow rate as a function of the differential pressure with an accuracy of +/- 5 %.

Position C

Behind the pressure compensation area, the insert is completely compressed and acts as an orifice.

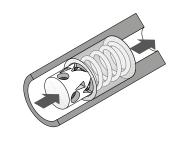



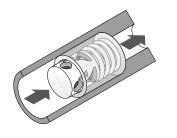


Hermetic

FLOW REGULATION

Flow regulator and list of parts

The valve is available for the following flow rates

Model	Pressure NW		max. flow
	rating		rate for H ₂ O
32-63-40-10	63 bar	32	10,00 m³/h

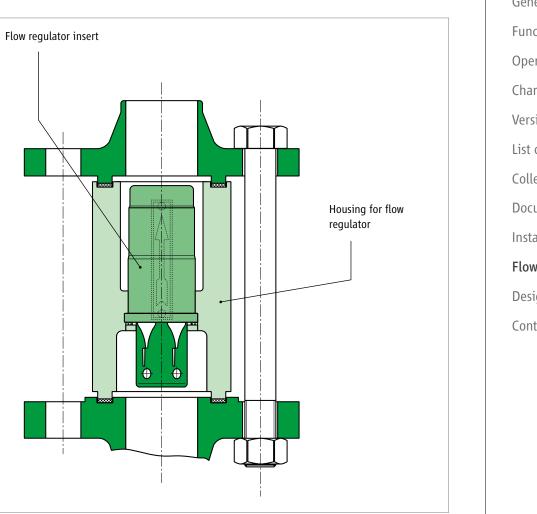

Hermetic

Table of Contents General information Function Operating principle Characteristic maps Versions List of parts Collective measurements Documentation and tests Installation Flow regulation Design software Contact

17

Design software / services

Online design

The user-oriented design software simplifies the selection of the right refrigerant pump. It is also possible to calculate the energy-saving options with the software. The software-based design for frequency-controlled operation is easily possible. Minimum and maximum speeds and the appropriate operating range are displayed.

Quick registration


Do you want to know more about the many benefits of our new design software?

Simply register as a new user on our homepage www.hermetic-pumpen.com

After registration and receiving the access data, you can test the design software free of charge. Registered users simply log in using their access data – a new registration is not required.

Other online services

We provide free 3D CAD models for your planning and your design office.

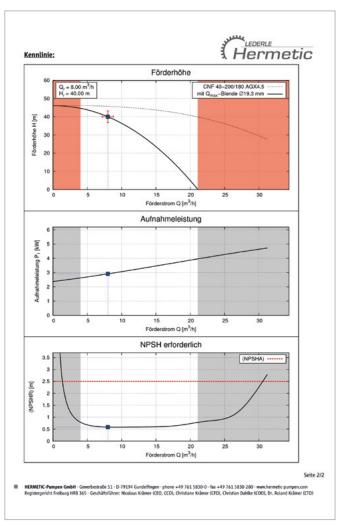

Example view after pump selection

Hermetic

Benefits of the design software

Direct entry of the required refrigeration capacity

Dynamic selection according to power consumption, NPSH

The database contains all common refrigerants

Integration of different pump protection systems, such as Q_{max} orifice or flow regulator

Design for variable-speed drives

Hermetic

Table of Contents General information Function Operating principle

Characteristic maps

Versions

List of parts

Collective measurements

Documentation and tests

Installation

Flow regulation

Design software

PRODUCT INFORMATION Contact

sales-support@hermetic-pumpen.com

www.hermetic-pumpen.com

YouTube | LinkedIn | Expert tool

Product information CAMhk / EN / 12 / 2022 All information in this document conforms to the latest specifications at the time of printing. We reserve the right to make technical improvements and changes at any time.



Table of Contents General information Function Operating principle Characteristic maps Versions List of parts Collective measurements Documentation and tests Installation Flow regulation

Design software

